



MODEL: 5642-WG
Oscillating Sprinkler

For more information visit

hoselink.com.au

or call

1300 900 617

Cultivating **Connections**

 youtube.com/hoselink

User Manual

MODEL: 5642-WG
Oscillating Sprinkler



HOSELINK[®]

Kit Contents

- 1 x Oscillating Sprinkler
- 1 x Accessory Connector

The Oscillating Sprinkler has a number of adjustment controls ideal for all of your watering needs. It has a rectangular spray coverage that can be adjusted to cover an area up to 15m x 12m. This flexibility allows you to effortlessly water a large or narrow lawn, against an edge, or only one side of your lawn.

Assembly Instructions

STEP 1 Connect to Sprinkler

Screw the Hoselink Accessory Connector into the sprinkler.

STEP 2 Connect to Water Supply

Connect to a water supply by attaching your Hoselink-fitted hose end to the Accessory Connector included with the sprinkler.

STEP 3 Turn on Water

Turn on water source.

Cleaning Tips

By following a few simple cleaning tips, your sprinkler should provide years of reliable service.

- Clean the water inlet filter by unscrewing your Accessory Connector to reveal the filter. Remove, rinse and re-fit.
- Use the provided cleaning pin to clear any clogged spray nozzles. Then, run water throughout with the cleaning pin removed to flush the system.



Maintenance Tips

- If sprinkler does not operate properly, remove the cleaning pin from the end and flush water through.
- Drain the sprinkler after use.
- Do not allow water to freeze in the sprinkler.
- Store out of direct sunlight.

- If the sprinkler stops oscillating as expected, spraying some silicone lubricant onto the tabs and underneath the sprinkler should help keep everything moving.

Components



Sprinkler Range

Under good water pressure the Oscillating Sprinkler can cover up to a 12m x 15m rectangle. The range and width can be adjusted by utilising the on/off valves and adjusting the tabs.

Replacement Parts Available

Cleaning Pin, Black Watering Jets, On/Off Buttons & Flow Control Dial