

User Manual

Model: L220 | **Wide Angle Solar Wall Light with Sensor 30LED**



A motion-sensor solar light with a choice of 3 light times to satisfy differing demands, this wide-angle light is the ideal choice for illuminating fences, patios, decking or walkways.



Lighting Mode

Sensor with Dim Light - From dusk to dawn, a dim light is displayed continuously. If motion is detected, the light brightens for the set duration.

Lighting Times

The duration of the motion activated bright light can be adjusted by clicking the timer button on the side of the unit.

1. One flash - 20 seconds.
2. Two flashes - 40 seconds.
3. Three flashes - 60 seconds.

Product Installation - OPTION 1

Adhere using Hoselink Outdoor Acrylic Double Sided Tape (SKU L100).

Product Installation - OPTION 2

Follow these steps to mount to the wall or fence using the supplied plugs and screws:

Step 1 - Find a suitable location

Solar lights need access to direct sunlight for optimum results, preferably 6-8 hours per day. The motion sensor will detect movement up to 5m away.

Step 2 - Mounting the solar light

Use a 6mm drill piece for masonry installation. Gently hammer the plugs into place and then secure the screws tightly. For timber use a 3mm drill piece without the plugs.

Step 3 - Turn on the light

To activate the light, turn on the switch on the side of the unit. Turn this on to desired setting. Test by covering the solar panel completely to check that the light comes on. The light is now ready for use.

Note: If the light does not turn on this could be due to the battery not being charged. Leave out in direct sunlight for 6 – 8 hours and try again.

For more information visit
www.hoselink.com.au
or call **1300 900 617**