

MODEL: 5561 Extendable 4-Pattern Wand

#### For more information visit

hoselink.com.au

or call

1300 900 617

# Cultivating **Connections**

youtube.com/hoselink

# User Manual

MODEL: 5561 Extendable 4-Pattern Wand

# HOSELINK

# HOSELINK

## Kit Contents

1 x 4-pattern Extendable Wand1 x Accessory Connector

The 4-Pattern Extendable Wand is great for both watering and cleaning. With the extendable handle, pivot head and in-built flow control, it is perfect for hard to access areas.

### Instructions

#### STEP 1

If not already attached, screw the Hoselink Accessory Connector into the base of the wand.

#### STEP 2

Attach a Hoselink fitted garden hose at the end of the accessory connector on wand.

#### STEP 3

Select the desired watering setting. Turn flow control to ON position by turning as per arrow direction. Allowing water to flow.

TIP:



#### Make sure your selected setting is in line with the arrow on the head. When changing settings, you will hear two 'clicks' before the next setting.

# Extending and Unscrewing

Find the black nut located above the second foam grip.





Unscrew the nut, pull the wand's head up to your desired

### Settings

Mist Wide mist spray for seedlings.

**Cone** Wide, fine spray dispersion.



#### Gutter

Hard, direct spray perfect for gutter cleaning.

#### Shower

More direct spraying. Ideal for lawn, garden beds and pots.





