

MODEL: L250 | Small Solar Wall Light | Motion Sensor | 18LED | HAVEN

For more information visit

hoselink.com.au

or call

1300 900 617

Cultivating **Connections**

youtube.com**/hoselink**

User Manual

MODEL: L250 Small Solar Wall Light | Motion Sensor | 18LED | HAVEN



HOSELINK

Kit Contents

1 x Motion Sensor Solar Wall Light

The Wide Angle Solar Wall Light with Sensor comes with two additional LED bulbs angled on either side of the light to create a wider range of luminosity. The maximum lighting angle can reach 120 degrees, ideal for illuminating driveways and entertaining areas.

Lighting Mode

The light automatically turns on with a dim light at dusk. Once motion is detected, a bright light is activated for 20 seconds.

Activate the Light

To activate the light, turn on the switch on the back of the unit. Test by covering the solar panel completely to check that the light comes on. The light is now ready for use.

Product Installation

STEP 1 Find a suitable location

Solar lights need access to direct sunlight for optimum results; preferably 6-8 hours per day. The motion sensor will detect movement up to 5m away.

STEP 2 Install the light

Installation - Option 1

Using adhesive outdoor tape.

Adhere using Hoselink Outdoor Acrylic Double-Sided Tape (SKU L100), sold seperately.

Installation - Option 2

Using supplied hardware.

Use a 6mm drill piece for masonry installation. Once your hole is drilled, gently hammer the plugs into place and then secure the screws tightly. For timber, use a 3mm drill piece without the plugs. Hang the light and enjoy. Be sure to clean the solar panel periodically to maintain optimal performance.

Specifications

Recommended Mounting Height	2 – 2.5 metres
LED Lumens	88 lumens (bright light)
Light Colour	Cool white
Waterproof Rating	IP65
Charge Time	8 hours
Working Time	Up to 60 hrs depending on light mode
Materials	ABS + PC
Size	h100 x w120 x d45mm
Number of lights	18 LED
Motion Sensor Range	0 – 5 metres
Motion Sensor Angle	120 degrees

NOTE: if the light does not turn on, this could be due to the battery not being charged. Leave out in direct sunlight for 6–8 hours and try again.