



MODEL: L512
Modern Metal Solar Bollard | Warm
White | 2 Pack | PILLAR

For more information visit

hoselink.com.au

or call

1300 900 617

Cultivating **Connections**

 youtube.com/hoselink



User Manual

MODEL: L512
Modern Metal Solar Bollard | Warm
White | 2 Pack | PILLAR

HOSELINK[®]

Kit Contents

2 x Modern Metal Solar Bollard
2 x Ground Spikes

The perfect blend of functionality, style, and sustainability. Designed to illuminate any outdoor space with a contemporary flair.

Activate the light

To activate the light, lift the round solar panel from the bollard and slide the 'ON/OFF' button to the 'ON' position. To test the light, cover the solar panel with your hand and check if the light comes on. The solar panel has a built-in intelligent light sensor, which detects darkness, automatically illuminating the light at dusk and turning it off at dawn.

Product Installation

STEP 1 Find a suitable location

Solar lights need access to direct sunlight for optimum results; preferably 6-8 hours per day.

STEP 2 Install Solar Light

Product Installation – Option A

Ground Spike

A.1 Remove spike from the inside of the solar light and push the spike into the base of the solar light until secured then simply push into soft ground in your desired location.

Be sure to clean the solar panel periodically to maintain optimal performance.

Storing the Lights

Manually switch the power to 'OFF'. This will preserve the battery and prevent it from fully discharging during extended storage.

Specifications

| | |
|-----------------------------|-------------------------|
| Solar panel | Monocrystalline Silicon |
| Battery | NI-MH 1.2v 1200mAh |
| Operating time | 8 – 10 hours |
| Charge time | 6 – 8 hours |
| Light temperature (Kelvins) | 3200K |
| LED lumens | 20 Lumens |
| Number of LEDs | 3 |

WARNING: Do not use this light underwater or in low-lying puddles.