HOSELINK

Installation guide

Decorative Wall Mount Hose Reel Manual

Items: 3552 & 3553

Kit contents

1 1x Leader Hose
2 1x Hardware Pack
3 1x Crank Handle
4 1x Intel Tube with Seals
4x Anchors

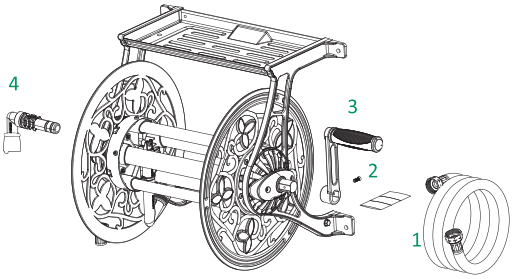

Tools Required:
13mm socket or spanner
Hammer Drill or rotary drill with 10mm masonry drill bit
Small Hammer or Mallet
Powdered Hand Drill with 1/4" (6mm) Standard Drill Bit
Phillips Screwdriver

Before you begin

This product has been packaged to assure it arrives in the best possible condition. Please be careful when unpacking. **Read instructions prior to assembly.** This kit contains parts that can be damaged if incorrectly assembled. Please follow instructions carefully.

Note: Do not completely tighten bolts until assembly is completed. For easier assembly, we recommend that two people assemble this product.

⚠ CAUTION

Please consider carefully the appropriate method to be used in mounting this hose reel. Hardware is included for your convenience but may not be suitable for all mounting conditions. Some surfaces like vinyl siding or render may require special considerations or additional hardware. Improper mounting can cause personal injury or property damage. If you are unsure, contact a home improvement professional.

Assembly instructions

Tools Required:
Phillips Screwdriver

Step 1: Attaching the Crank Handle
Locate and place the handle over axle. *Reference Figure 1.* Secure in place using screw provided.

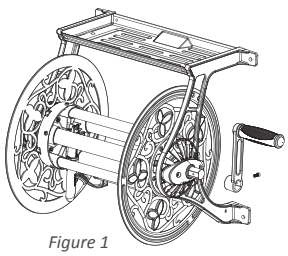

Figure 1

Step 2: Attaching the Leader Hose
Remove 2 meter leader hose from the packaging.

Leader hose can be connected to the water inlet. *Reference Figure 2.*

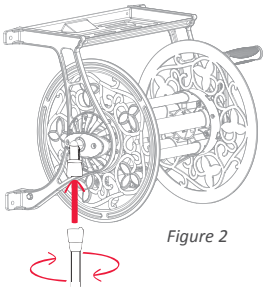

Figure 2

Installation

Please follow these steps carefully for installation.

Mounting to Concrete or Brick Masonry Construction

Tools Required:
Phillips Screwdriver
Hammer Drill or rotary drill with 10mm masonry drill bit
Small hammer or mallet

1. Position the reel where it is to be installed and mark the first hole position.
2. Drill the hole with the 10mm drill bit, 50mm deep. (**Tip:** Depth is important, use sticky tape around the drill bit to mark 50mm depth)
3. Hammer plug into the first hole.
4. Position the reel again to mark the 2nd hole position, then drill hole as above and hammer in plug.
5. Repeat process 1-3 to drill the remaining 2 holes.
6. Set unit in place and secure with lag screws provided into each anchor. *Reference Figure 3.*

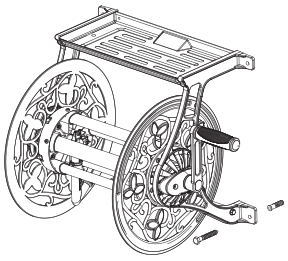

Figure 3

Mounting to Flat Wood Frame Construction

Tools Required:
Phillips Screwdriver
Powered hand drill with 1/4" (6mm) standard drill bit

> ⚠ **CAUTION**
> To prevent damage or injury, be sure to verify that holes align with stud locations on the wall.

1. Position the reel where it is to be installed and mark all hole positions.
2. Drill four (4) holes 2" (50mm) deep. Locate unit over holes and secure with lag screws provided. *Reference Figure 4.*

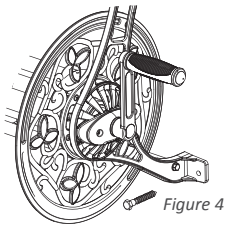
Figure 4

Hose Installation (If installing your own hose)

1. Place the included hose clamp over the hose.
2. Soften the end of the hose in hot water.
3. Push the hose onto the barbed coupling.
4. Align the hose clamp over the hose and coupling then tighten. If water leaks, then tighten the screw on the hose clamp.

Maintenance

Annual Seal Lubrication

To prevent leaks and to lengthen seal life, the water inlet should be lubricated annually. *Reference Figure 5.*

- Stop the flow of water to the unit by turning off the cap.
- Release the locking lever.
- Pull the inlet tube from the frame of the unit.
- Lubricate the seals as indicated in *Figure 5*. Please use silicon spray, silicon oil or white lithium spray lubricant.
- Replace the tube and close the locking lever.

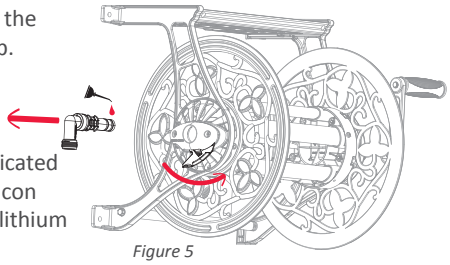
Figure 5